



Kinetico RO Filter Change Instructions

Step 1:

Turn off the main valve to the drinking system and the valve to the tank. If unsure, it's best to turn off any valves connected to the system by following the tubing. Now depressurize your system of all air and water by opening the RO faucet. There should be no water running out of the tap/faucet.

Step 2:

Remove the old filter. This will be yellow or purple.

Step 3:

Fill the new filter with water. This will replace the pre-filter (yellow or purple filter) that was just removed.

Step 4:

Remove and replace post-filter (orange or blue filter). This will be under the blue indicator/meter.

* Remove and replace any K5 auxiliary filters, if applicable.



DO NOT REMOVE the membrane filter (green sticker), usually located in the middle.

Step 5:

Slowly turn the water supply back on to the drinking system and tank.

Step 6:

Turn on water and let it run until the tank is empty.

Step 7:

Allow unit to refill with water for at least 2 hours before using.



If you have any questions,
please call our office:

262-549-7733